



ALL 4 PLUGS MUST BE SNAPPED IN SOCKETS BEFORE USING

FOR USE WITH:
PART NO. 3000
3002

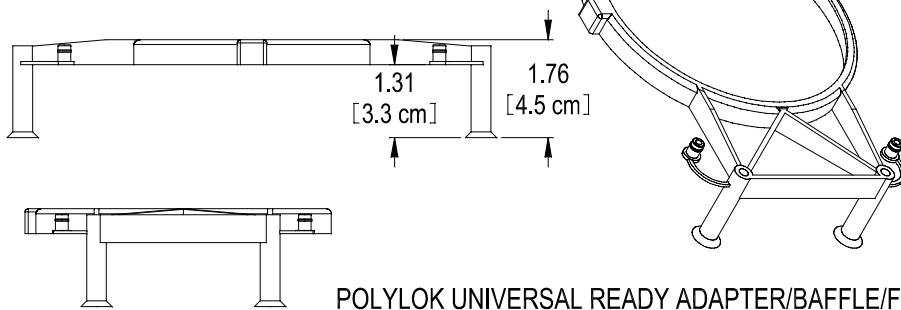


POLYLOK UNIVERSAL READY ADAPTER/BAFFLE/FILTER
PART NO. - 3021
MATERIAL - LLDPE

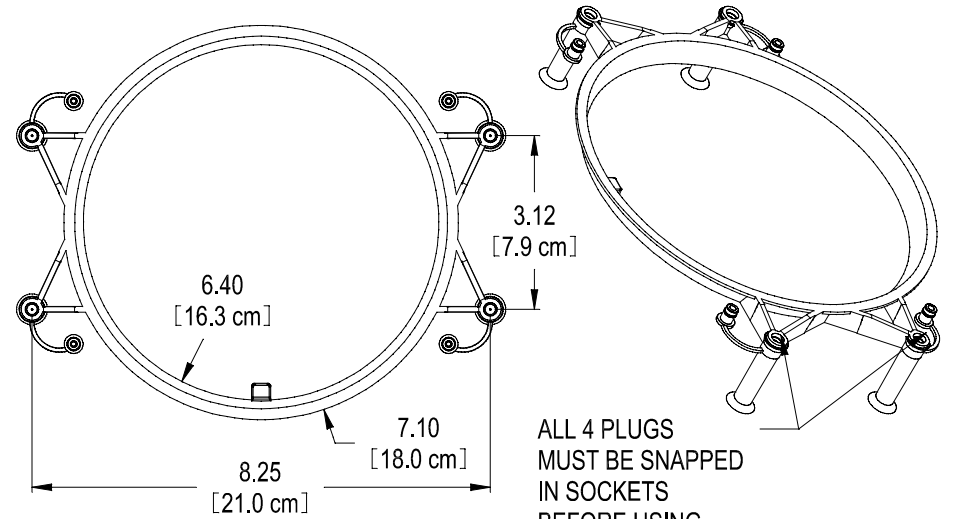

ALL 4 PLUGS MUST BE SNAPPED IN SOCKETS BEFORE USING

FOR USE WITH:
PART NO. 3022

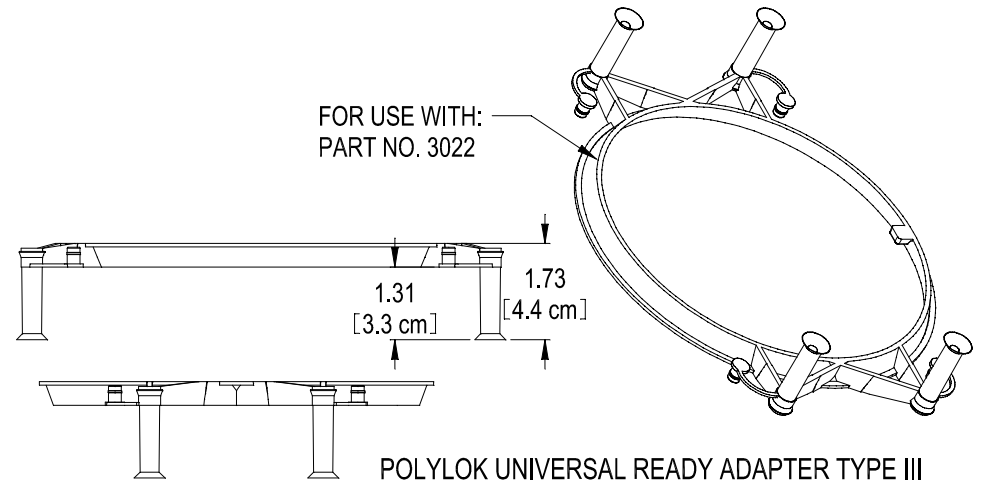

POLYLOK UNIVERSAL READY ADAPTER TYPE III
PART NO. - 3021-3
MATERIAL - LLDPE