

PART #: 3014-SOCK

Polylok Pressure Filter Sock Installation
Fits Filter Models: 3014-F & 3014-SS



PART #: 3014-F
Plastic Slot Filter




PART #: 3014-SS
Stainless Steel Filter

It is not recommended to reuse socks.
For information on how to order replacement socks visit our website at:
www.polylok.com

BEFORE YOU INSTALL:

If your filter has a wire handle installed, you must remove it before installing sock.

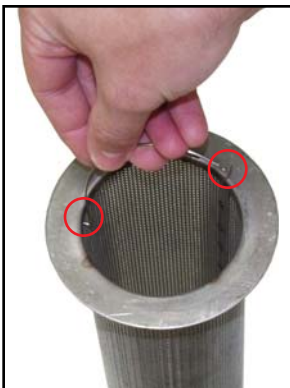


AFTER YOU INSTALL:

Install wire handle once sock has been installed correctly.




STEP 1:

Insert sock through center of filter so that equal lengths stick out from both ends.

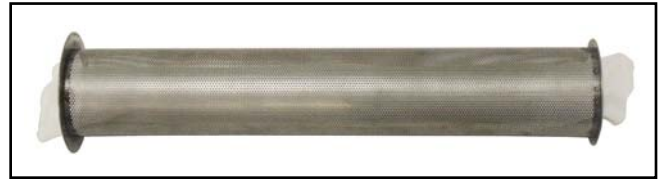

STEP 2:

Wrap sock around the top flange (*larger end*) and overhang about 1" onto the filter.

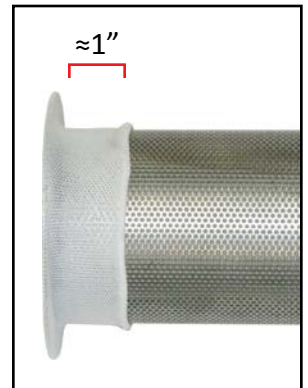

STEP 3:

Wrap sock around bottom flange (*smaller end*) until sock is tightly secure. Look through center of filter to make sure sock is not twisted.



Correctly Installed Sock

NOTE:

If sock is twisted, grab one end of sock and twist until straight.



Polylok, Inc.

3 Fairfield Boulevard
Wallingford, Connecticut 06492

1-877-765-9565

www.Polylok.com