


**6" Poly-Air<sup>™</sup> Activated Carbon Vent Filter**

**Installation Instructions:**

1. Remove contents from box.
  - 1 Filter Housing
  - 1 Lid with 3 Screws
  - 1 Netted Bag of Activated Carbon Pellets
  - 4" Pipe Reducer (Optional)
2. Remove the netted bag of activated carbon pellets from the zip lock bag.
3. Slide the netted bag of activated carbon pellets into the 6" Poly-Air<sup>™</sup> housing (**See Diagram**).
4. Take the 6" Poly-Air<sup>™</sup> lid and place it on top of the 6" Poly-Air<sup>™</sup> housing. Make sure to align screw holes on lid with screw holes on housing.
5. Tighten all three lid screws using a Phillips screwdriver
6. If using 6" Poly-Air<sup>™</sup> on a 4" vent pipe take the pipe reducer and spread glue on the **OUTSIDE** perimeter as shown on the right. Slide reducer into the bottom of the 6" Poly-Air<sup>™</sup> housing. Align filter housing to top of vent pipe and press down firmly to lock in place.

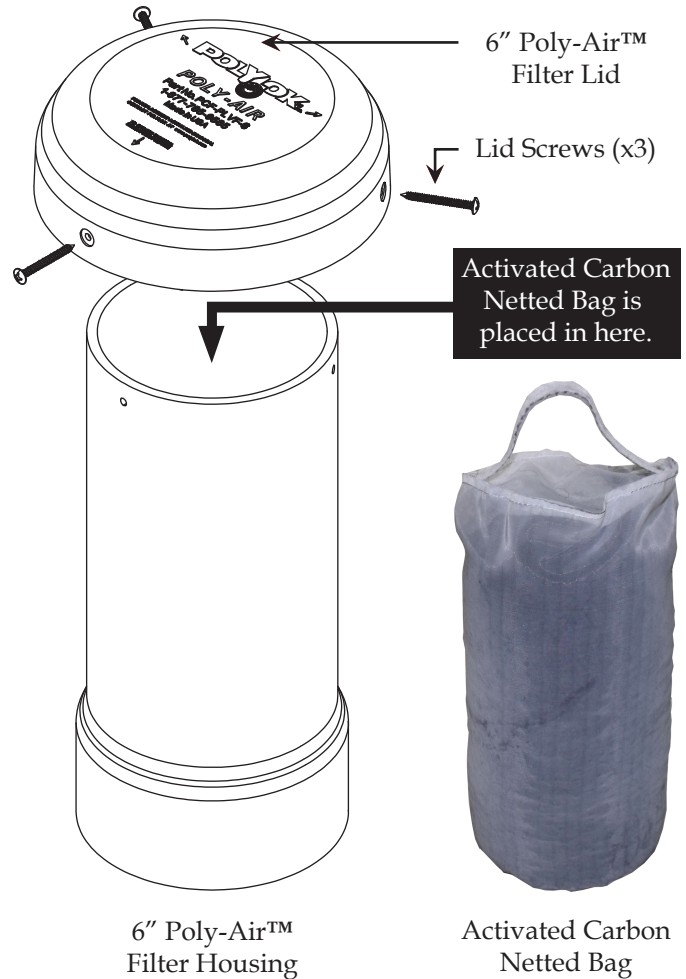

**Maintenance Instructions:**

1. Unscrew the 3 screws from the 6" Poly-Air<sup>™</sup> lid.
2. Remove lid from the 6" Poly-Air<sup>™</sup> housing.
3. Using the provided handle on the netted bag of activated carbon pellets lift bag out of the housing and discard.
4. Follow **Installation Steps 3-6** to complete 6" Poly-Air<sup>™</sup> maintenance.

