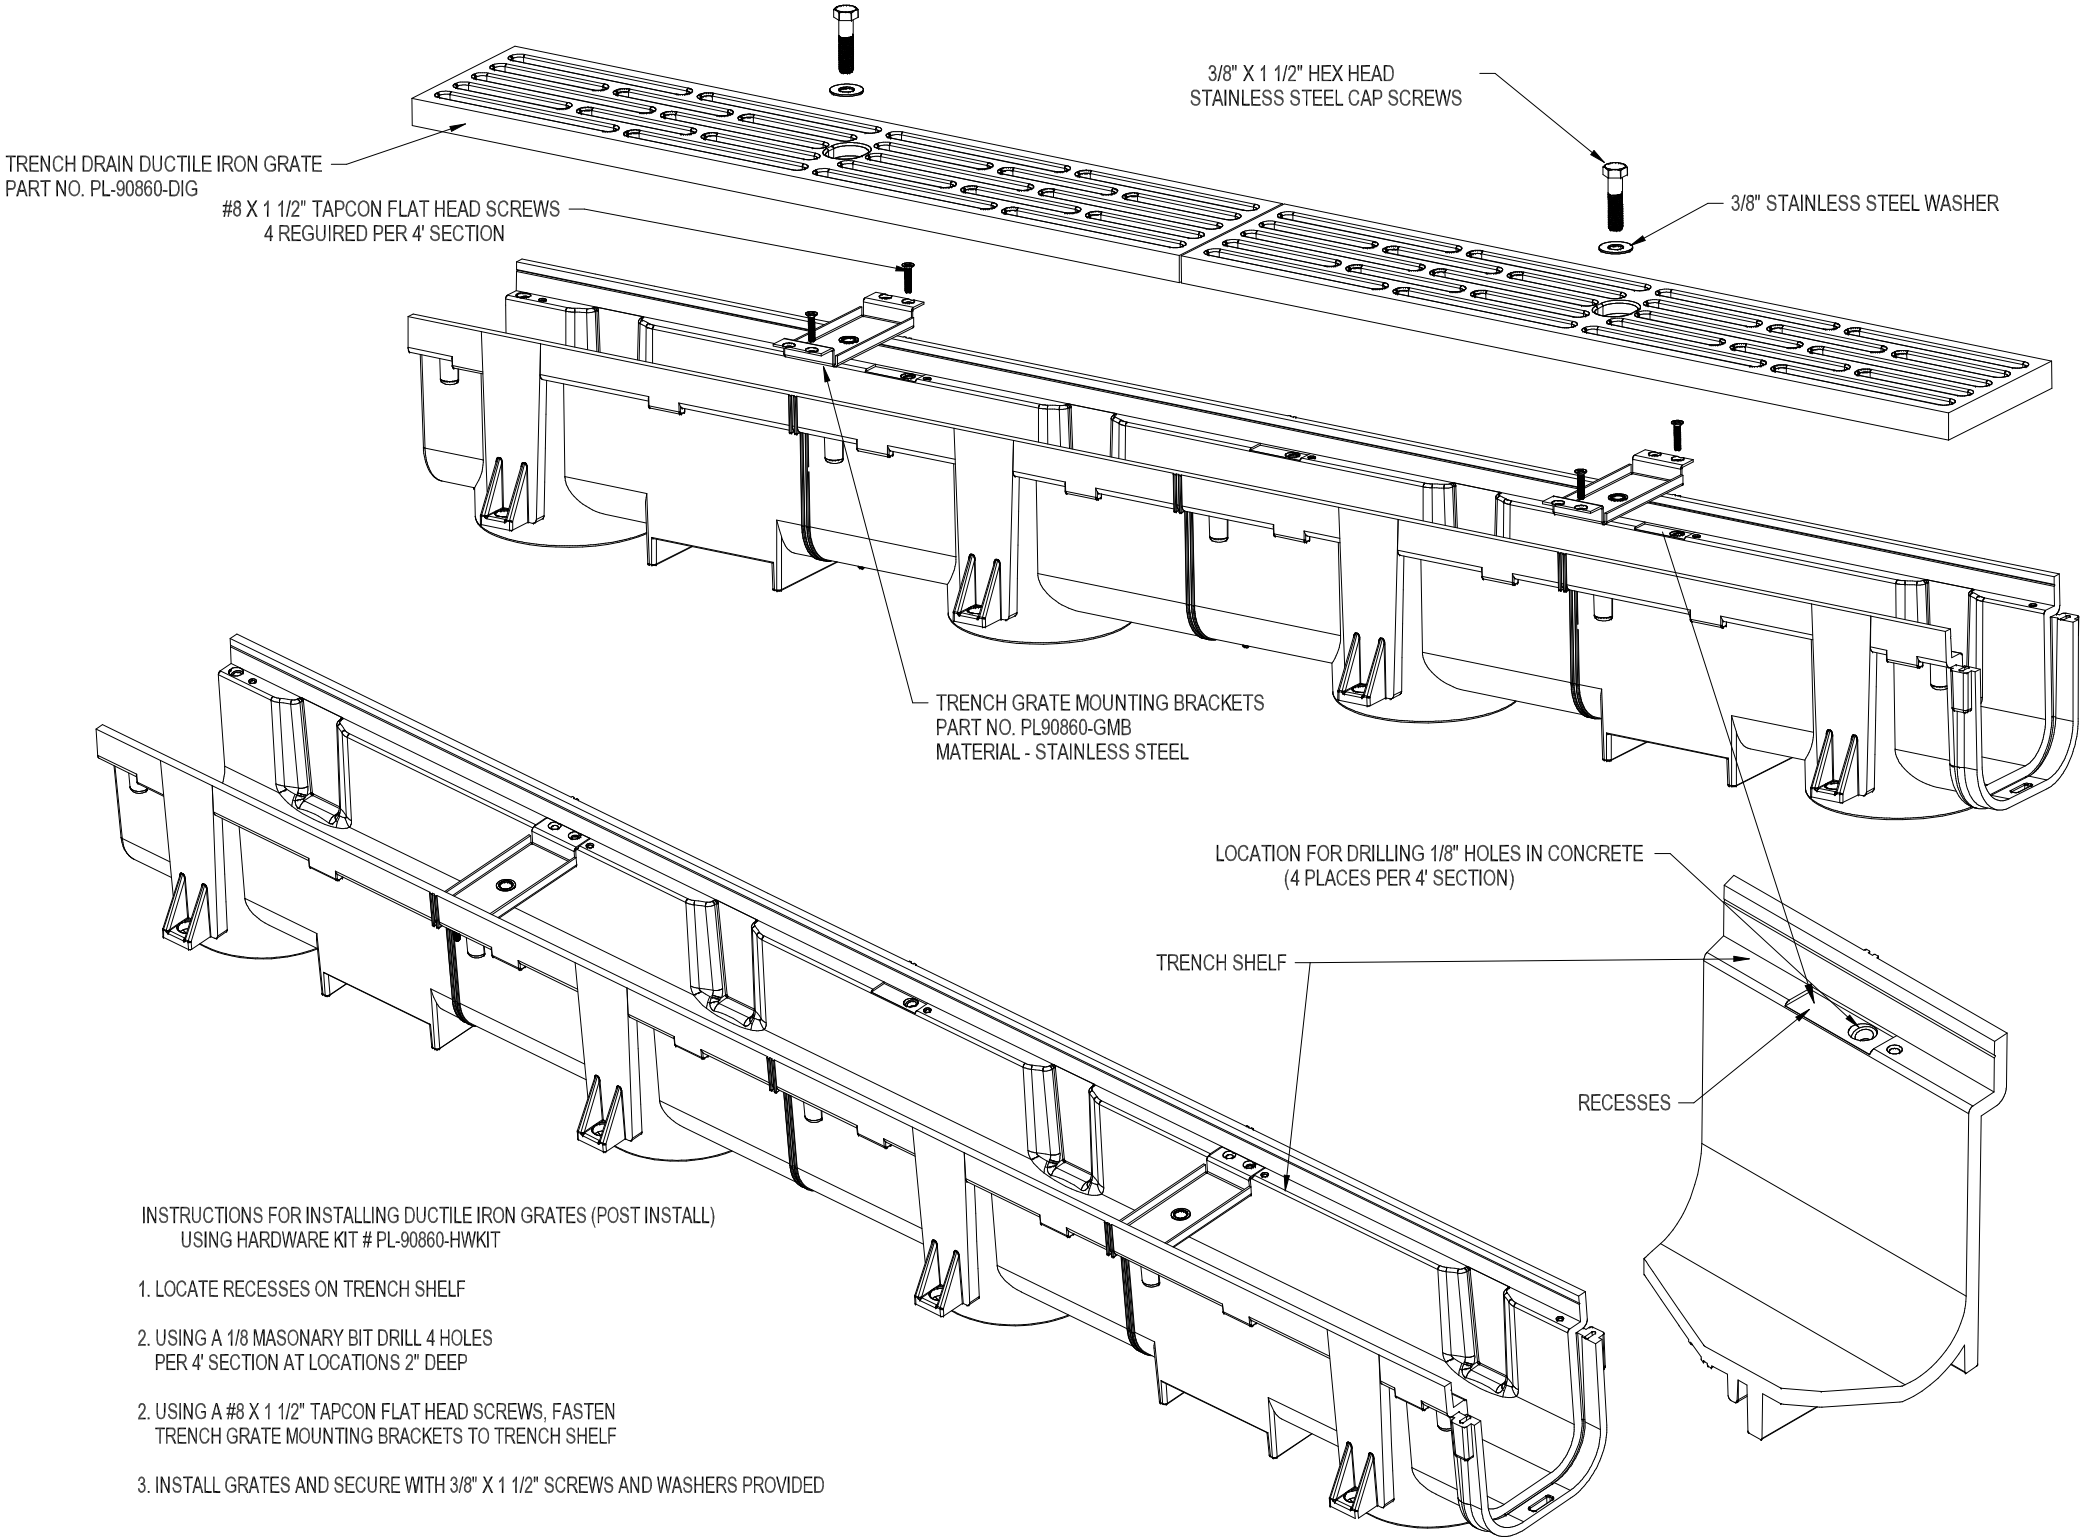

INSTRUCTIONS FOR INSTALLING DUCTILE IRON GRATES (POST INSTALL)
USING HARDWARE KIT # PL-90860-HWKIT

1. LOCATE RECESSES ON TRENCH SHELF

2. USING A 1/8 MASONARY BIT DRILL 4 HOLES
PER 4' SECTION AT LOCATIONS 2" DEEP

2. USING A #8 X 1 1/2" TAPCON FLAT HEAD SCREWS, FASTEN
TRENCH GRATE MOUNTING BRACKETS TO TRENCH SHELF

3. INSTALL GRATES AND SECURE WITH 3/8" X 1 1/2" SCREWS AND WASHERS PROVIDED